



R

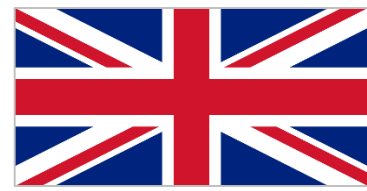

UNLOADING POINT FOR NONROAD DIESEL

Stora Enso Ingerois Oy

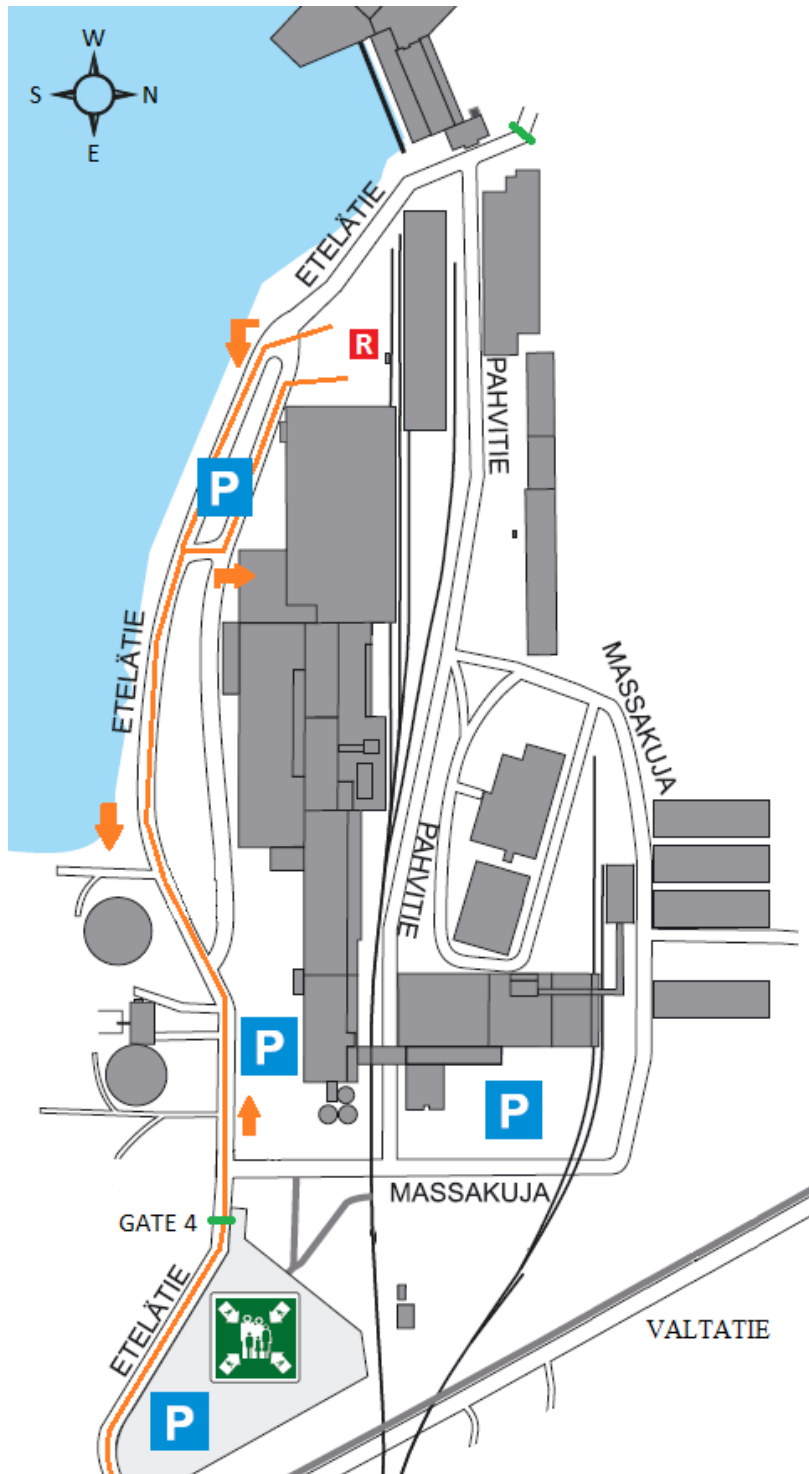

R = Unloading point

Gate address:

Etelätie 3, 46900 Inkeroinen

Phone number of mill's patrolling guard:

+358 400 359 093

Nonroad diesel unloading instructions for driver:

1. Entry to the mill area via the main gate, and driving route to the unloading area and out as indicated on the above map. The provided driving routes must be strictly adhered to.
2. If problems arise during the unloading, call the phone number provided at the unloading point (mill's patrolling guard, tel. +358 400 359 093). **The driver is absolutely forbidden to access the warehouse and mill facilities!**
3. Washing cars is absolutely forbidden.
4. Make sure that the unloading point is clean and tidy.

SAFETY INSTRUCTIONS:

- In addition to the personal protective equipment prescribed by the hauling company, wear safety shoes, a helmet or bump cap, protective eyewear and high-visibility clothing.
- Follow the instructions of the haulier and any chemicals specific instructions provided at the unloading point.
- The speed limit at the mill site is 40 km/h unless a lower speed limit is indicated by traffic signs.
- Smoking is prohibited at the mill site.



IN CASE OF EMERGENCY, CALL THE EMERGENCY NUMBER 112 AND INFORM THE MILL'S MAIN GATE OF THE EMERGENCY CALL, TEL. +358 20 462 6502.
IN CASE OF A HAZARDOUS SITUATION, IMMEDIATELY CONTACT THE SHIFT FOREMAN, TEL. +358 400 543 944.